



Thermostat Programming Web Site Guide


Welcome to PG&E's SmartAC™ program! Your SmartAC Thermostat can be managed over the Internet.

SmartAC User Name:

Password:

LOGGING IN TO THE SmartAC WEB SITE

- To access the SmartAC web site, open a web browser and enter the program address: www.pge.com/smartac
- Click on the link **Manage your SmartAC Device**
- Enter your user name and password
- Click **Submit**

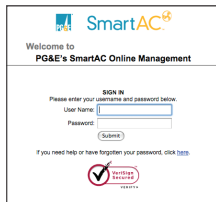

PROGRAMMING THE THERMOSTAT

Drag your mouse over the **Thermostat Settings** menu located on the left side of the page. Select **Schedule** from the drop-down menu.

- Select the time period: Weekday, Saturday or Sunday
- Select **Cooling** or **Heating**
- Slide the arrows on the thermometers to change the temperature or input the number directly in the boxes
- Select a time for **Wake (W)**, **Leave (L)**, **Return (R)** and **Sleep (S)**
- Click **Submit**

SmartAC Manager Powered by Yukon

Account: Welcome
 Thermostat Settings
 Events
 Questions
 Administration

Acc #1
 Ling Feller
 123 Main Street
 Stockton, CA 95200

Program Your Thermostat

Weekday Saturday Sunday Apply settings to Saturday and Sunday

1) Select Cooling or Heating.
 2) Slide thermometers to change start times.
 3) Adjust your cooling or heating temperatures.
 Click for hints and details.

Make temporary adjustments to your heating and cooling system here

Cooling Heating

69°F 72°F 62°F 74°F

Midnight W L Noon R S Midnight



Wake (W)	Leave (L)	Return (R)	Sleep (S)
Start At: 05:10 AM	Start At: 08:30 AM	Start At: 04:50 PM	Start At: 09:40 PM
Temp: 69 °F	Temp: 72 °F	Temp: 62 °F	Temp: 74 °F


Mode: C° | F°

Submit Save/Apply Schedule Recommended Settings

TEMPORARILY CHANGING THE TEMPERATURE

Drag your mouse over the **Thermostat Settings** menu located on the left side of the page. Select **Manual** from the drop-down menu.


- Use the up  and down  arrows to the right of the temperature box
- Check **Hold** if you want to override your thermostat's schedule
- Under **Mode**, select **Cool**, **Heat**, or **Off**, and select your Fan settings. *For more information on the mode and fan settings, please see your thermostat's user guide*
- Click **Submit**

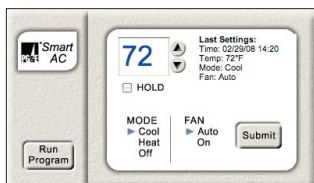


VIEWING PROGRAM HISTORY

The program history logs the dates and times your SmartAC device was activated to help in an energy supply emergency.

- To view the program history, under **Events**, select **Cycle History**
- Select the time frame you would like to view from the drop-down box under **Complete Cycle History**
- Click **View**

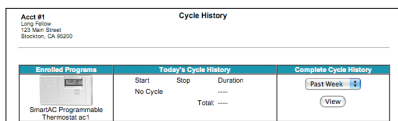

Enrolled Programs	Today's Cycle History		Complete Cycle History
	Start	Stop	Duration
	No Cycle		Total

Act #1
123 Main Street
Blacksburg, VA 24060

SmartAC Programmable Thermostat act

Complete Cycle History: Past Week (dropdown), View

CHANGING YOUR USER NAME AND PASSWORD

- Under **Administration**, select **Change Log In**
- Input a **New User Name**
- Enter a new password in the text boxes for **New Password** and **Confirm Password**
- Click **Submit**

If you change your password and forget it later, PG&E cannot retrieve the password for you. Instead, please call us at **1-866-908-4916**, and we will provide you a new password.

TEMPORARILY OPTING OUT OF ACTIVATION

If activation of your SmartAC device happens at an inconvenient time, you may temporarily opt-out for the day online*.

- Select **Opt Out** under **Events**
- Choose the **Start Date**
- Click **Submit**



*Not available during extreme energy supply emergencies.

"PG&E" refers to Pacific Gas and Electric Company, a subsidiary of PG&E Corporation. © 2009 Pacific Gas & Electric Company. All rights reserved.

These offerings are funded by California utility customers and administered by PG&E under the auspices of the California Public Utilities Commission.