



*Pacific Gas and  
Electric Company*<sup>®</sup>

---

# **Electric Transmission Preventive Maintenance (ETPM) Manual**

**TD-1001M**

**Electric Transmission Maintenance**

**Copyright © 2025  
by Pacific Gas and Electric Company.  
All rights reserved.**

**No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means – electronic, mechanical, photocopying, recording, or otherwise – without the prior written permission of Pacific Gas and Electric Company. For information, address:**

**Pacific Gas and Electric Company  
Technical Document Management**

# TABLE OF CONTENTS

<a href="#">CHAPTER 1</a> .....	Inspection Overview
<a href="#">CHAPTER 2</a> .....	Maintenance Overview
<a href="#">CHAPTER 3</a> .....	Climbing
<a href="#">CHAPTER 4</a> .....	Ground
<a href="#">CHAPTER 5</a> .....	Aerial
<a href="#">CHAPTER 6</a> .....	Patrols
<a href="#">CHAPTER 7</a> .....	Transmission CRT
<a href="#">CHAPTER 8</a> .....	Underground
<a href="#">APPENDIX A</a> .....	Acronyms and Definitions of Terms
<a href="#">APPENDIX B</a> .....	References – Forms, Job Aids, Flowcharts, and Related Documents
<a href="#">APPENDIX C</a> .....	Equipment, Tools, and Materials
<a href="#">APPENDIX D</a> .....	Line Patrol File Guidelines
<a href="#">APPENDIX E</a> .....	Boardwalk Access and Personal Safety

This page intentionally left blank